


# PAFSS<sup>®</sup>

PNEUMATICALLY ACTUATED FIRE SUPPRESSION SYSTEMS

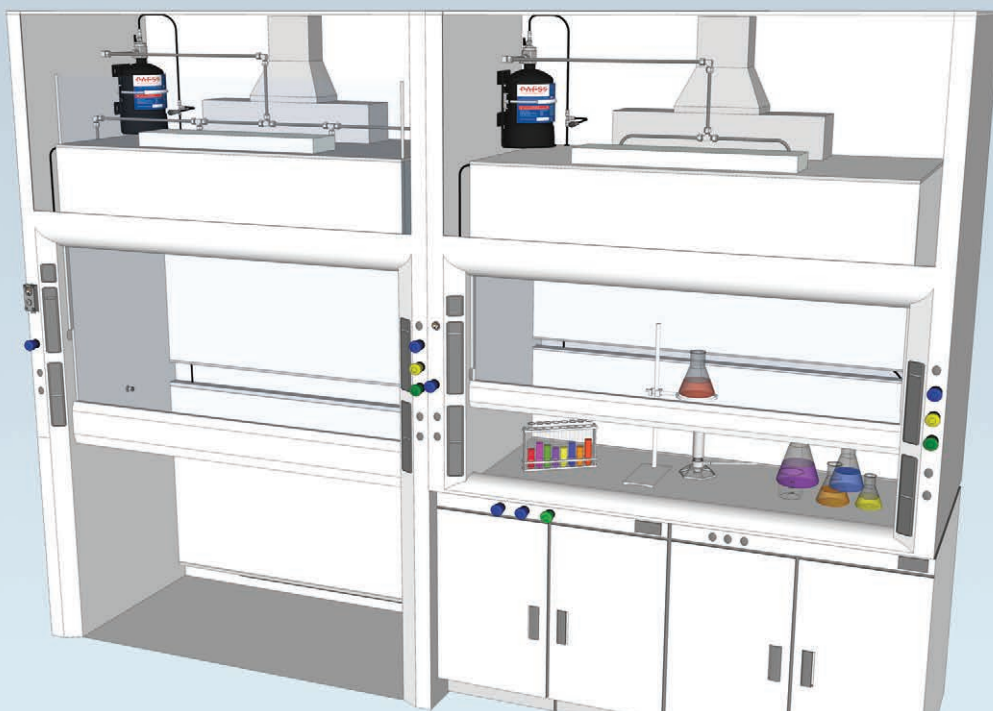

## Laboratory Fume Cupboard / Hood Fire Protection

Automatic Fixed  
Fire Suppression Systems for  
Laboratory Fume Cupboards / Hoods

- > [JACTONE.COM/PAFSS](http://JACTONE.COM/PAFSS)
- > +44 (0)1902 357777
- > [pafss@jactone.com](mailto:pafss@jactone.com)

**Jactone**<sup>®</sup>

# Why choose PAFSS®

## ▶ THE PROBLEM

Fume cupboards, also known as 'fume hoods' or 'fume cabinets' are commonplace in industry, pharmaceutical research facilities and educational establishments. On such sites there can be multiple users, a wide range of chemicals and different processes that can considerably increase the risk of a fire.

Due to the semi-enclosed nature of fume cupboards, fires can be difficult to identify, which often means that it is too late for users to take action as the fire will have developed. Typically fume cupboards are found in multiple numbers in close proximity which means that a fire that originates in a single piece of equipment can spread to other adjacent equipment.

The results can be devastating, resulting in the risk of lost research, costs, downtime and danger to staff or students.

## ▶ THE PAFSS SOLUTION

Fume cupboards require a specialist fire suppression system that is capable of detecting and extinguishing a fire situation within the fume cupboard workspace, dealing with the fire event locally before it can more fully develop.

PAFSS systems are specifically designed to detect and discharge inside the fume cupboard at the heart of the fire, extinguishing quickly and preventing any spread or escalation of the fire to neighbouring fume cupboards and the wider building. This can significantly reduce the risk of injury to personnel and losses caused by equipment down time and operational disruption.

PAFSS fire suppression systems offer peace of mind for customers looking to protect their assets and staff from the risk of fire.

**On guard 24 hours a day, 365 days a year**



\*UL Listing for PAFSS detection tubing



# The benefits of PAFSS®

## › EASY TO INSTALL

PAFSS is simple to install and maintain on both new and existing equipment.

## › AUTOMATIC

PAFSS offers a fast and automatic operation from the initial detection of a fire, through to suppressing it.

## › RELIABLE

Our UL listed highly reliable detection tube remains unaffected by dirt, dust, debris and oil. It is also resistant to many chemicals (full details on request).

## › FLEXIBLE

The detection tubing allows for an unlimited number of fire detection points. It's flexible nature means it can be located adjacent to identified risk areas, providing fast effective detection.

## › EARLY INTERVENTION

The early intervention of a PAFSS system can often prevent the release of a larger room suppression system, saving on expensive refill costs.

## › NO ELECTRICAL POWER

PAFSS requires no power supply for detection or actuation, remaining operational during power interruption.

## › SYSTEM MONITORING

Integral pressure switches allow remote system monitoring and initiation of safeguarding actions. Can be integrated into the buildings fire alarm system.

## › QUALITY COMPONENTS

Stainless steel discharge pipework and nozzles which are vital in potentially corrosive laboratory environments. Superbly engineered specialist valves and pressure vessels.


## › HOW PAFSS WORKS




Jactone PAFSS fire suppression systems require no power for detection or operation. PAFSS fire detection tubing is installed throughout the risk area in the workspace, providing fast and effective detection of a fire. Upon flame impingement or high ambient temperature, the pressurised detection tube ruptures with a burst at the hottest point. The extinguishing agent is then discharged via the stainless steel pipework and nozzles which are aimed at the hazard area inside the workspace.

Indirect PAFSS systems are available as standard with ABC dry powder and CO2 extinguishants. Other extinguishants can be made available for specialist applications.

### Bench Type Fume Cupboard / Hood

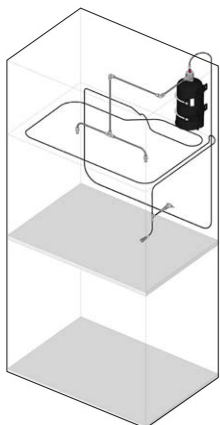

### Walk-In Type Fume Cupboard / Hood

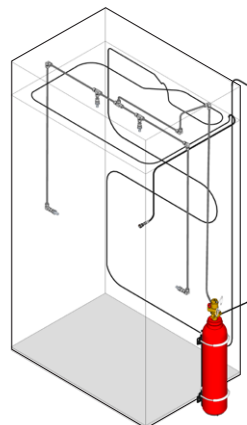

Cylinder mounting location and extinguishant selection is installation dependent.

# PAFSS<sup>®</sup>

PNEUMATICALLY ACTUATED FIRE SUPPRESSION SYSTEMS



UK manufacturing and assembly



On guard 24 hours a day, 365 days a year



Simple to install and maintain



Technical expertise, training and support



> [JACTONE.COM/PAFSS](https://jactone.com/pafss)

> +44 (0)1902 357777

> [pafss@jactone.com](mailto:pafss@jactone.com)

Jactone Products Ltd  
Springvale Business Park,  
Springvale Avenue, Bilston,  
West Midlands, WV14 0QL  
UNITED KINGDOM



Certificate No. FM 25049



Fire Industry Association

